

## Walk Test Mode – AU5000 Series Panel

**IMPORTANT: This product is part of a life-safety system.**

**Please Note: Regular inspection and servicing must be performed by a competent person who has specialist knowledge of Fire Detection and Alarm Systems (FDAS), current and relevant training and experience, access to appropriate spare parts, and sufficient information about the system. (Reference: AS1851-2012 Section .6)**

**This document supersedes all previous versions. Please ensure any outdated hard or soft copies are securely discarded.**

**To confirm this is the latest and most applicable version for your task, please contact Fusion Fire Systems directly.**

**Issue Date: June 2025**


**Version: 0.1**

Use Walk Test Mode to verify detector and sounder functionality without triggering a full fire alarm. Ideal for maintenance and commissioning checks.

### Steps to Enter Walk Test Mode


#### 1. Access the Test Menu

- Press the **MENU** button on the panel.
- If you're in **Level 2 mode**, highlight **TEST** and press **✓**
- If you're in **Commissioning mode (Level 3)**, press **NEXT MENU** twice → then select **TEST**.

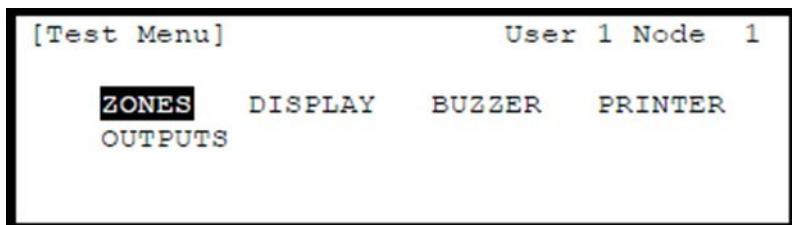

#### 2. Select Zones for Testing

 - Under the Test Menu, select **ZONES**.
- A pop-up will ask whether to **enable sounders** for ~10 seconds when a device is triggered.
- Choose your preferred option, then press **✓**

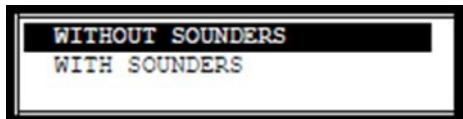

**TIP:** Before testing, check how the sounders are programmed to respond in Test Mode to ensure expected results.

### 3. Add Zones to Walk Test

- Use the arrow  /  buttons to scroll and highlight the **zones** you want to test.
- Press  to activate Walk Test mode for each selected zone.
- *(You can select multiple zones if needed.)*

[ 1 Zone in Test ]		
Zone	Test State	Location
0001	<b>IN TEST</b>	BASEMENT WEST
0002	-	BASEMENT EAST
0008	-	GROUND FLOOR
0009	-	MAIN RECEPTION AREA

**Note:** During Walk Test Mode:

- ⚠ Alarm Verification Function (AVF) and delay features are automatically **disabled**.
- ⚠ Fire Alarm Relays (e.g. to Alarm Signaling Equipment) will **still operate**.

### 4. Begin Testing Devices

- Once activated, the “**IN TEST**” LED will illuminate on the panel.
- Trigger devices (e.g. smoke detectors, MCPs).
- The panel will display “**FIRE**” when a test signal is detected.
- Once the device resets, the panel automatically clears the test condition.

[ 1 Zone in Test ]		
Zone	Test State	Location
0001	<b>IN TEST FIRE</b>	BASEMENT WEST
0002	-	BASEMENT EAST
0008	-	GROUND FLOOR
0009	-	MAIN RECEPTION AREA

⚠ If you’re testing more than 40 devices: Exit and re-enter Walk Test Mode after 40 devices have been tested (this is the max per session).

### 5. Exit Walk Test Mode

- When testing is complete, highlight the zones still in Walk Test mode.
- Press  to remove them from test state.

### 6. View Tested Devices (Optional)

- To confirm which devices were tested:
- Go to **VIEW ➔ LOG ➔ ALL EVENTS**.
- Use the  /  arrows to scroll through recent system events.